

THE TIVO REMOTE

The **TiVo button** takes you to the TiVo Central screen, the starting point for all your TiVo features and settings.

If programmed, **TV PWR** turns your TV on or off.

Use **Input** to select the input (such as a DVR, DVD player, game system) your TV displays.

Back goes back to the previous screen (in certain apps).

If programmed, **Volume** and **Mute** control the volume on your TV or A/V receiver.

Search lets you search by title, actor, or keyword.

Guide takes you to the program guide, where you can find shows to watch or record. Press it again to see filtered views.

Play, Pause, Rewind, Fast-Forward or play shows in **Slow Motion**. Press Rewind and Fast-Forward up to three times for three speeds.

Replay repeats the last 8 seconds of the show. Press and hold to jump to the beginning of a show.

The **A, B, and C buttons** set options and sort and filter views.

Clear removes the display of the info banner or program guide, and deletes titles from the My Shows or To Do list.



Live TV takes you to live TV. If you're watching live TV, use it to cycle through the tuners.

Info shows the info banner while watching live TV; press it again to make it disappear.

Use **Exit** to close certain apps.

Press **Select** to choose menu items or, when watching live TV, to bring up the Mini Guide.

Use the **arrow buttons** to navigate the TiVo menus and the program guide.

Use the **Channel Up/Down** buttons to change the channel and to page up or down while in the program guide or TiVo menus.

Press **Record** to record the show you're watching, or to set up a recording for a show selected in the guide.

Advance moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press Advance to jump to the next tick mark when fast-forwarding or rewinding.

Use the **Thumbs Up** and **Thumbs Down** buttons to rate shows, collections, or video providers for TiVo Suggestions.

Netflix launches the Netflix app.

Enter/Last returns you to the last channel tuned to in live TV.

The **On Demand** button is currently unavailable. Instead, go to the TiVo Central screen, then select 'Apps' > 'VU-IT! On Demand' to launch VU-IT! On Demand.

CUSTOMIZING YOUR TIVO REMOTE

When programmed, the POWER, INPUT, VOLUME, and MUTE buttons on the TiVo remote can control your TV or AV receiver.

Some remote controls are “RF remotes.” This means that the remote can control your device even if the device is not in direct line of sight with the remote (for instance, if it is behind a cabinet door).

If you have trouble using the remote in RF mode, or if you purchase additional remotes, you may need to “pair” the remote to your DVR before using it.

To program or pair your TiVo remote, press the TiVo button to go to the TiVo Central screen and select ‘Settings & Messages,’ then ‘Remote, CableCARD, & Devices,’ then ‘Remote Control Setup.’ Follow the easy on-screen instructions.

For more information on this and many other features, go to tivo.com/howto.



USING THE ON-SCREEN MENUS

To navigate the on-screen menus, use the remote control’s arrow buttons to move to the option you want, then press SELECT.

The LEFT arrow button often takes you to the previous screen.



ON-SCREEN ARROWS

The arrows that appear on the highlight bar show the directions you can move. For example, on this screen, you could press the RIGHT arrow to view details about the highlighted title, or the LEFT arrow to go back to the previous screen.



Arrows on the Highlight Bar

DISCOVERY BAR



The Discovery Bar is the bar of images across the top of the TiVo Central screen and other menu screens. Press the UP arrow to move up to the Discovery Bar, then the LEFT and RIGHT arrows to move around. Select an image that interests you to learn more about that item.



REMOTE CONTROL TIPS & TRICKS

Press the TiVo button  once to go to the TiVo Central screen, or twice to **go to the My Shows list**—your list of recorded shows.

While watching live TV, press SELECT  to see the **Mini Guide**: a snapshot of what's coming up on the next three channels.

While watching a recording, press PLAY  to bring up the status bar, and then press SELECT  to enter **QuickMode™** -- that's speeding up a show without missing any dialogue! Press SELECT again to play at normal speed.

CH UP/DOWN  does more than change the channel—it also **pages up or down through lists** of shows or menu items.

Press ADVANCE  to **move forward 30 seconds**. Press and hold to catch up to live TV or jump to the end of a recorded show.

Press REPLAY  to **jump back 8 seconds**. Press and hold to jump to the beginning of a show.

While watching a recording, press the LEFT arrow  to **stop the recording** and return to the program information screen.

Get where you want to go quickly! From the TiVo Central screen, press the following number buttons for these **shortcuts**:

- 1 OnePass Manager
- 2 To Do List
- 3 WishList Search screen
- 4 Search
- 5 Browse TV, Movies, and Videos
- 6 History

Note: Not all shortcuts are available on all devices.

REMOTE CONTROL TROUBLESHOOTING

Press any button on the remote. Does the activity light above the TiVo button on the remote flash?

If the activity light does not flash, make sure the batteries are positioned correctly in the remote, or try a new set of batteries.

If the activity light on the remote does flash, but the lights on the front of the device do not respond, restart your TiVo box.

See the Troubleshooting section for more help with your remote control.

Activity light

